

Audi allroad compressor 01-06



1. The compressor is located in front of the spare tire well underneath the car.



2. Remove the protective cover from the underside of the compressor via the three mounting studs.



3. With the three nuts removed, remove the cover to expose the compressor.



4. The compressor is held on with three nuts, one on each isolator. Isolators will be reused on the new assembly.




5. Disconnect the three electrical plugs, airline and intake air hose from the compressor. One plug is on the solenoid while the other two are positioned to the right.



6. Remove the old compressor from the car.

Audi allroad compressor 01-06

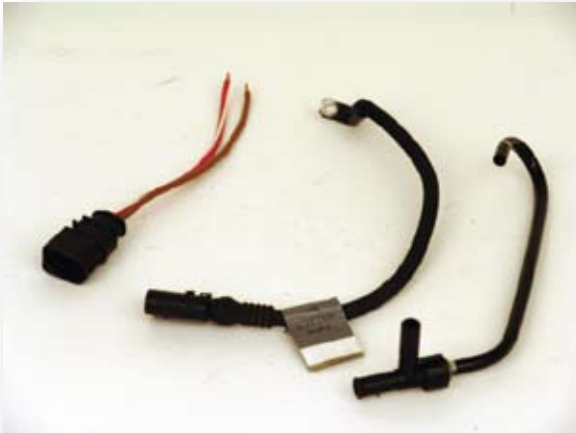

7. Remove the power cord, thermal sensor and intake tube from the old compressor.
PUSH DOWN ON THE BLACK RING WHILE PULLING OUT ON THE INTAKE TUBE FOR REMOVAL.



8. Attach the air intake tube to the new compressor assembly.



9. Loosen and remove the head bolt of the replacement compressor, as shown.



10. Place the thermal switch in place on the new compressor and retighten head bolt.



11. Strip the ends of the power cord wires and crimp them to the terminated ends.



12. Completed unit ready for installation in the reverse of steps 6-1.